




P41 型浮球閥安裝在水箱中由水面自動控制，常用於先導閥，亦可直接使用。當水箱中的水面下降時，浮球閥的連桿將隨著浮球與水面一起下降，直到浮球閥打開，讓水流入水箱。當水面緩慢增加時，浮球閥的連桿與浮球一起上升，最後關閉浮球閥，水流停止。如果浮球閥用於先導閥，則應安裝在遠離主管出口處，距離至少為 5 公尺。

The Model P41 Float Valve is automatically operated by the water surface and installed in the water case. It is usually used for a pilot, and it can also be used directly. When the water surface in the water case decreases slowly, the float arm of the float valve will roll down with water surface with the float ball. At a certain position the float valve will opens and let the water flow into the water case. When the water surface increases slowly, the float arm of the float valve will rolls up with the float ball and closes the float valve at last and the water flow is stopped. If the float valve is used for a pilot, it should be installed far away from the outlet of the main pipe. The distance is 5 meters as least.

結構材質 Material of Construction

No.	Parts Name	Material
1	閥體 Body	SUS304
2	浮球 Float Ball	SUS304
3	浮球連桿 Float arm	SUS304
4	閥蓋 Disc	SUS304
5	密封墊圈 Seal Gasket	EPDM

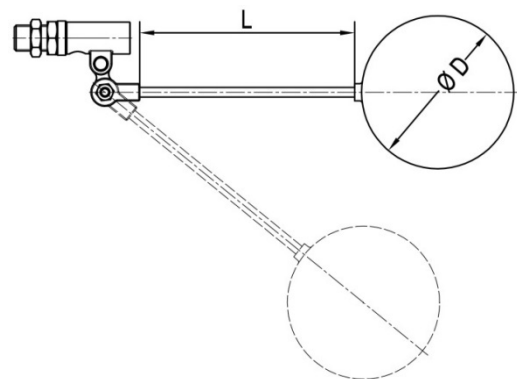

閥門規格 Specification

連接方式 Connection : PF 外牙 Male thread

最大工作壓力 Max working pressure : 5 kg/cm²

※如果工作壓力超過 5 kg/cm²，請聯絡我們

If the working pressure is higher than 5 kg/cm², contact factory.

※浮球閥的連桿和閥體間的角度可以調整。

The angle between the float arm and the body center line can be set at any position.

外形尺寸 Dimension

公稱口徑 DN(mm)	L	D
15	300	125
20	300	125
25	400	150
40	600	200
50	700	250

寶閥精密工業股份有限公司

King-tech Valve Precision Industry Inc.



臺北市新生北路二段 127 巷 47 號 1F

www.kingtech-sb.com

E-mail: sb.wow@msa.hinet.net



經銷商 Distributor