

5108N 雨水回收過濾器安裝、操作、維護保養
Rainwater Filter Installation /Operation/Maintenance Manual


①

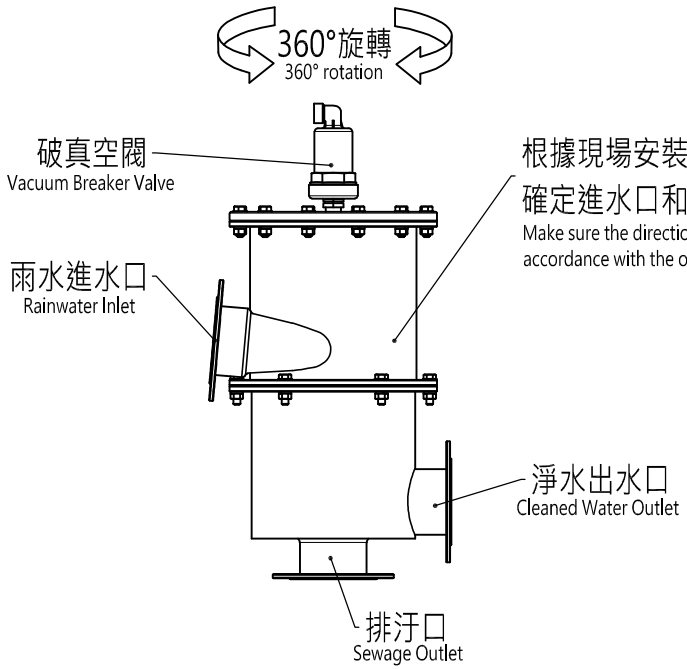

②

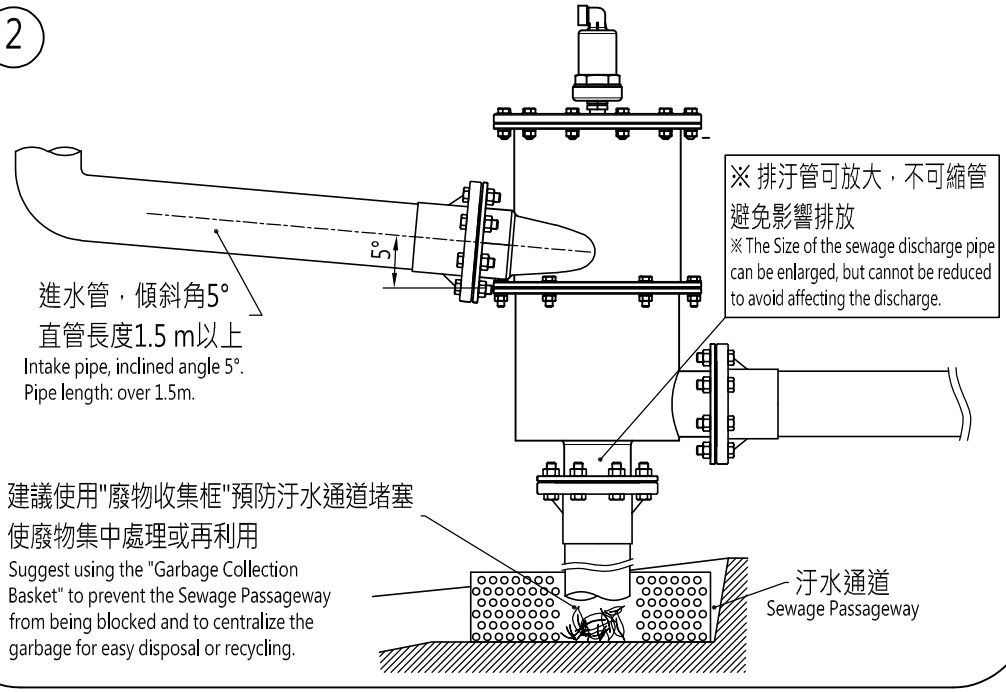

③

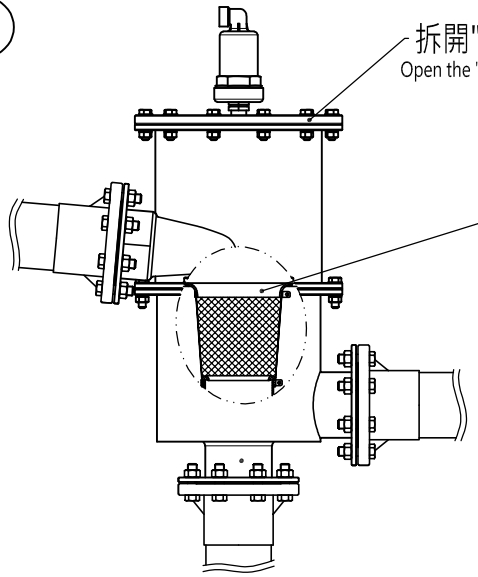


檢查內部過濾網
是否在安裝過程中移位
確認無誤後，蓋好上蓋，鎖上螺絲件
Check the inside filter to see if any displacement during installation.
Put on the Top Cover and Tighten the Screws after making sure everything is OK.

※雨水回收過濾器後端若有安裝超低壓定水位閥
其淨水出水口與定水位閥的垂直高度需超過2米高

說明：如檢查雨水回收過濾器是否堵塞，或清洗過濾裝置亦如此操作。
Note: Take the same operation to check the blockage situation of the rainwater filter, or to clean the filter device.


④ 過濾器工作原理圖
Filter Operation Principle Diagram

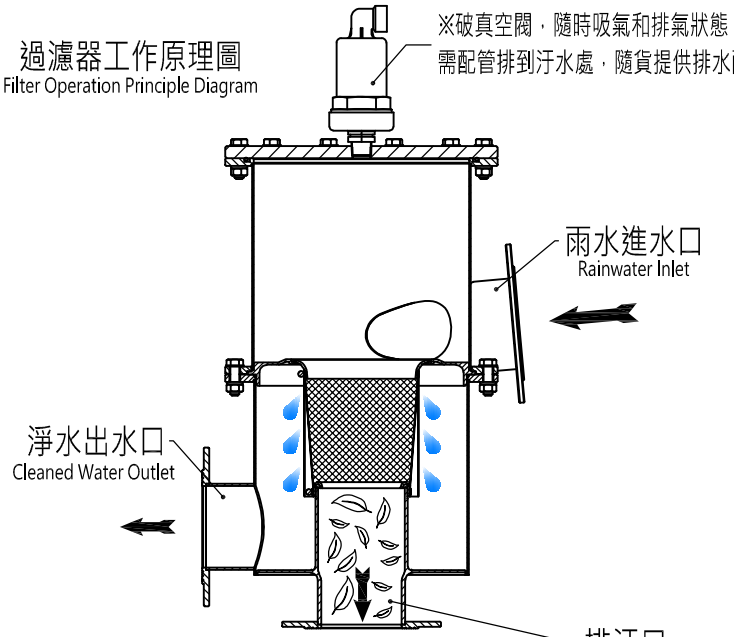

※建議正常使用情況下，每年拆出濾網檢查清潔
※It is recommended to remove the filter every year for inspection and cleaning.

雨水回收過濾器安裝示意圖
Rainwater Filter Installation Diagram

※當有多只雨水過濾器的淨水管或汙水管需要匯集為一支主管時
主管口徑必須放大，不得有同徑或縮管
否則會影響排水量，導致淹水外漏
2支4"管，匯整管需大於6"；2支6"管，匯整管需大於10"；2支8"管，匯整管需大於12"

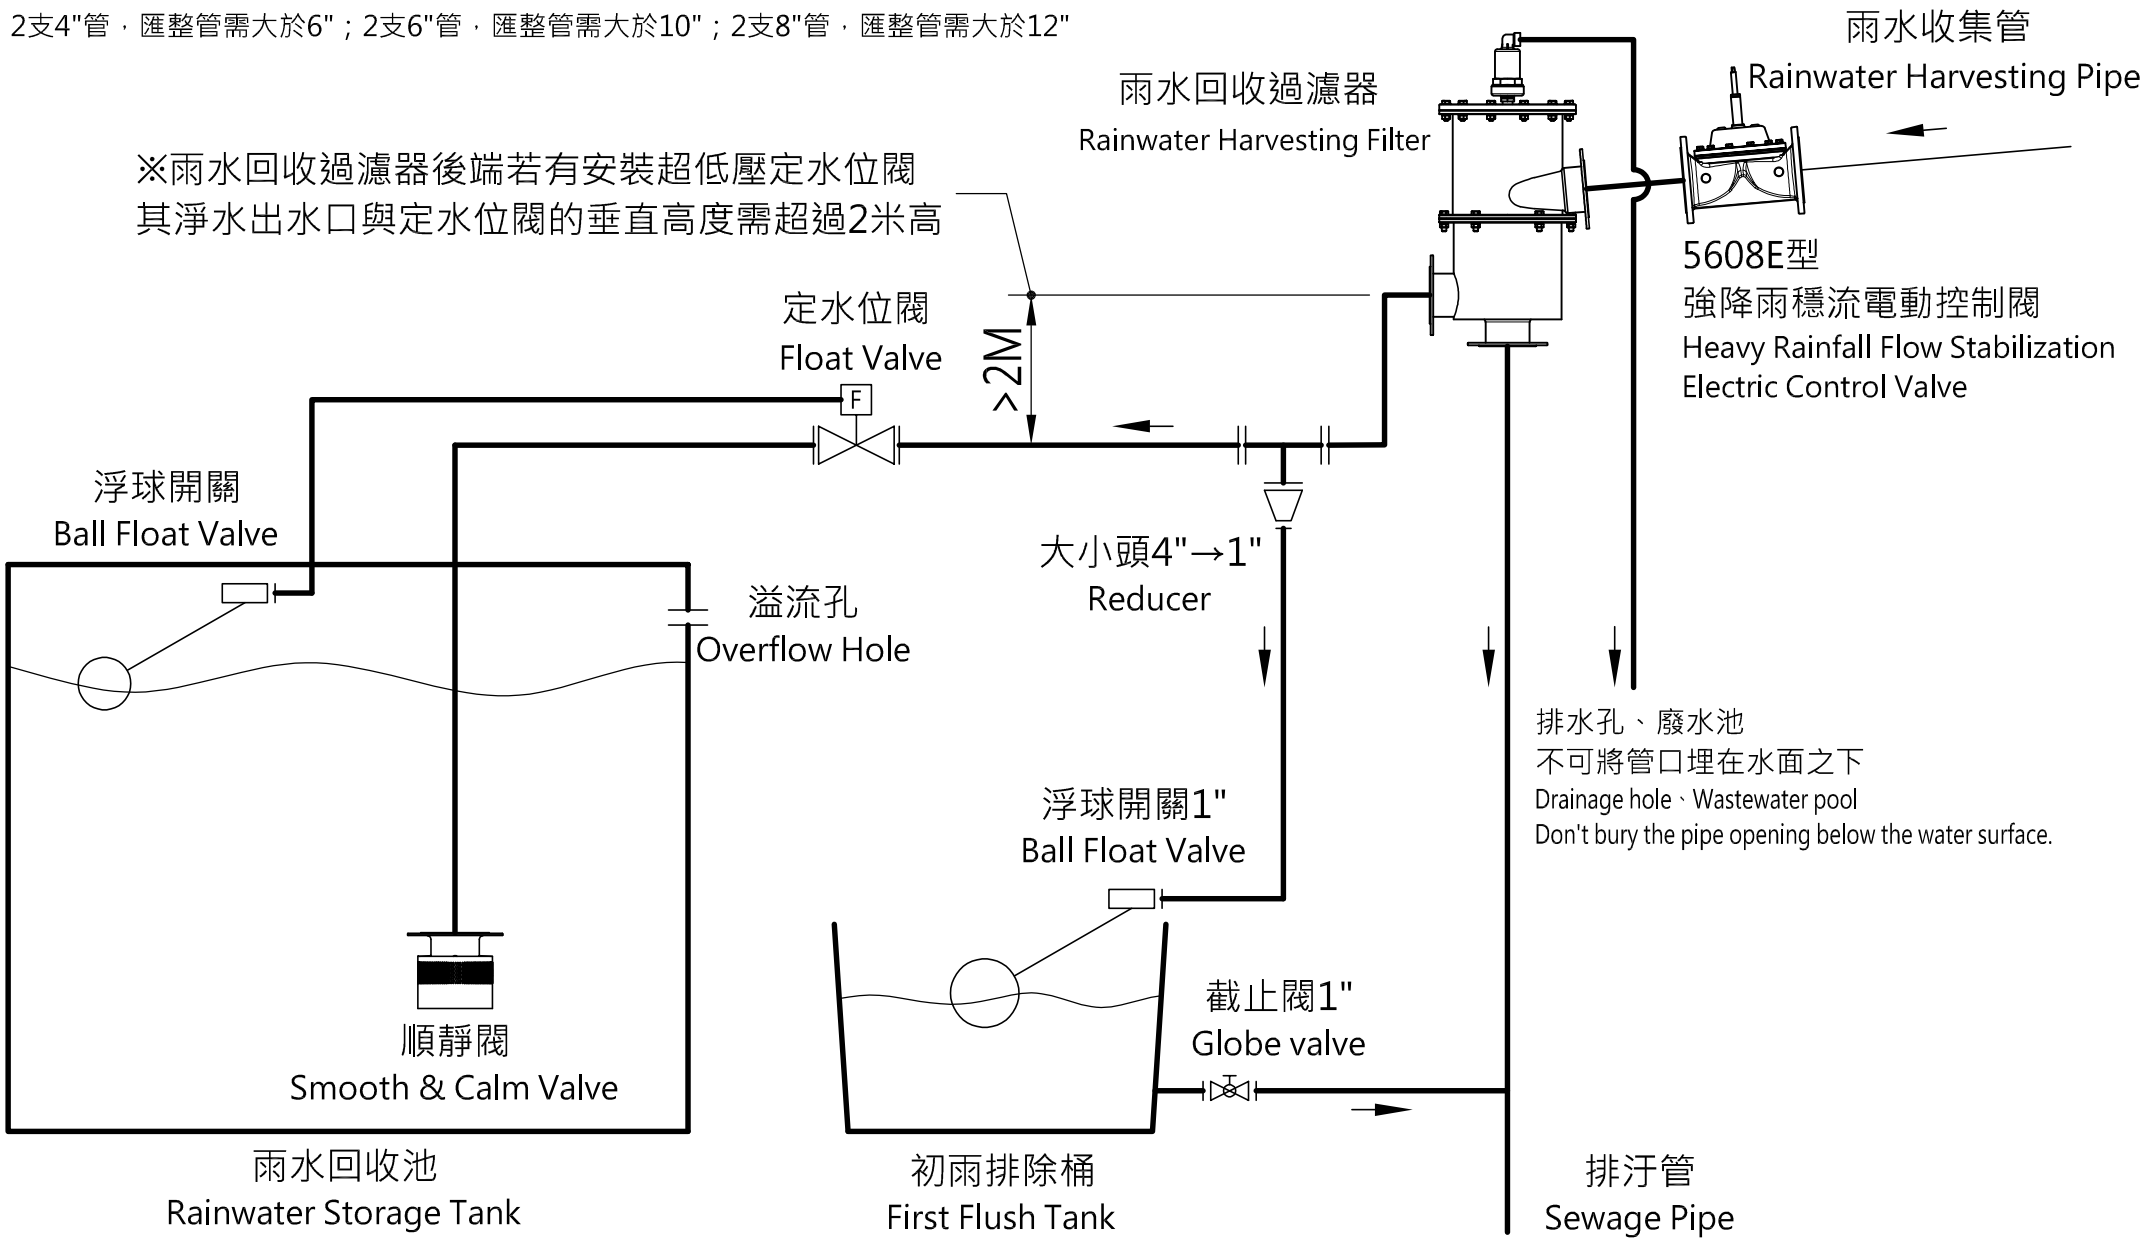

雨水回收過濾器分解圖
Rainwater Filter Exploded Diagram

